



# RANDOM BOULDER PLACEMENT

## Plan View

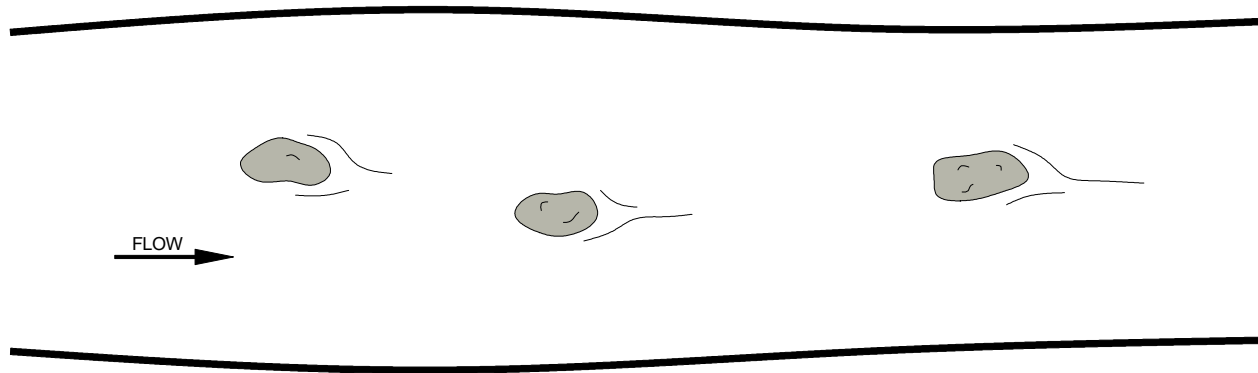

Note: Place boulders in the middle third of the wetted width of the stream to prevent flow deflection into the streambanks

## Section View

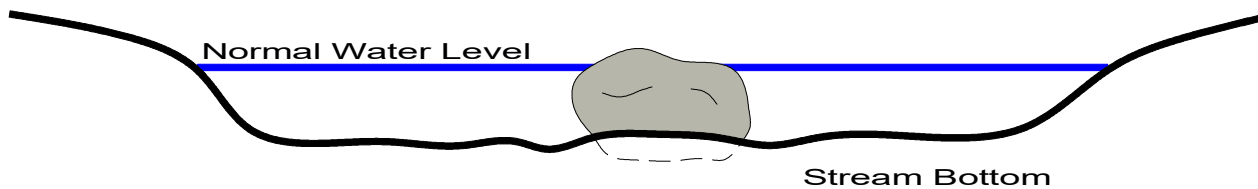

Note: Boulder should be large enough not to be displaced during high flow periods  
Boulder height should be within 2" of normal water level

